

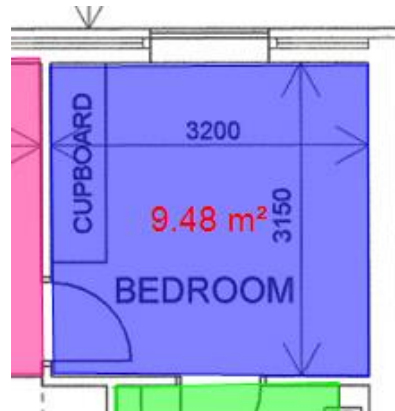


## Imperial or metric


On the toolbar in the Calibration section, toggle between metric and imperial

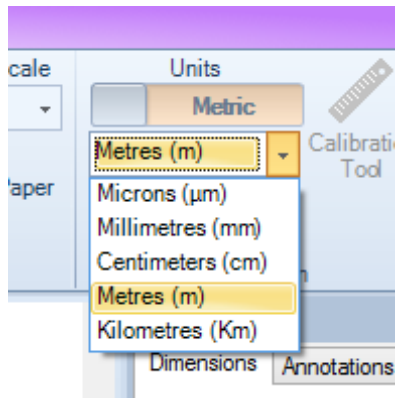

Slide the bar to toggle

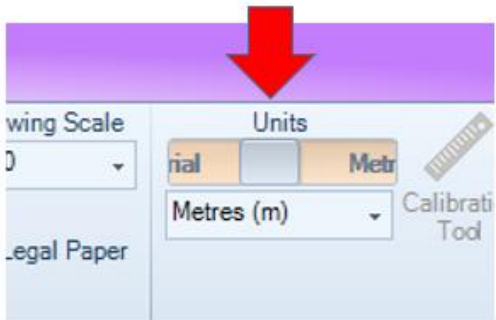

Dimensions on the drawing will change from metric to imperial and vice versa

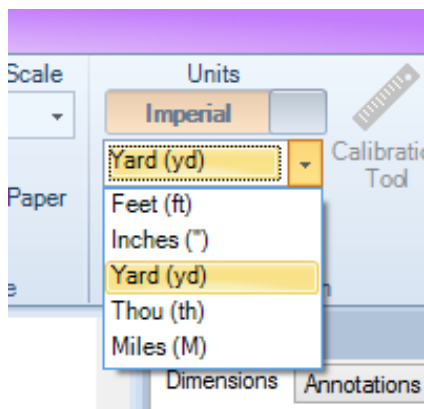

Kind regards

The QuickScale Team

[sales@quickscale.co](mailto:sales@quickscale.co)