


Move a measurement point

To move a point, click Select on the tool bar then click on the point and it will turn blue.

Click and drag the point to the new position.

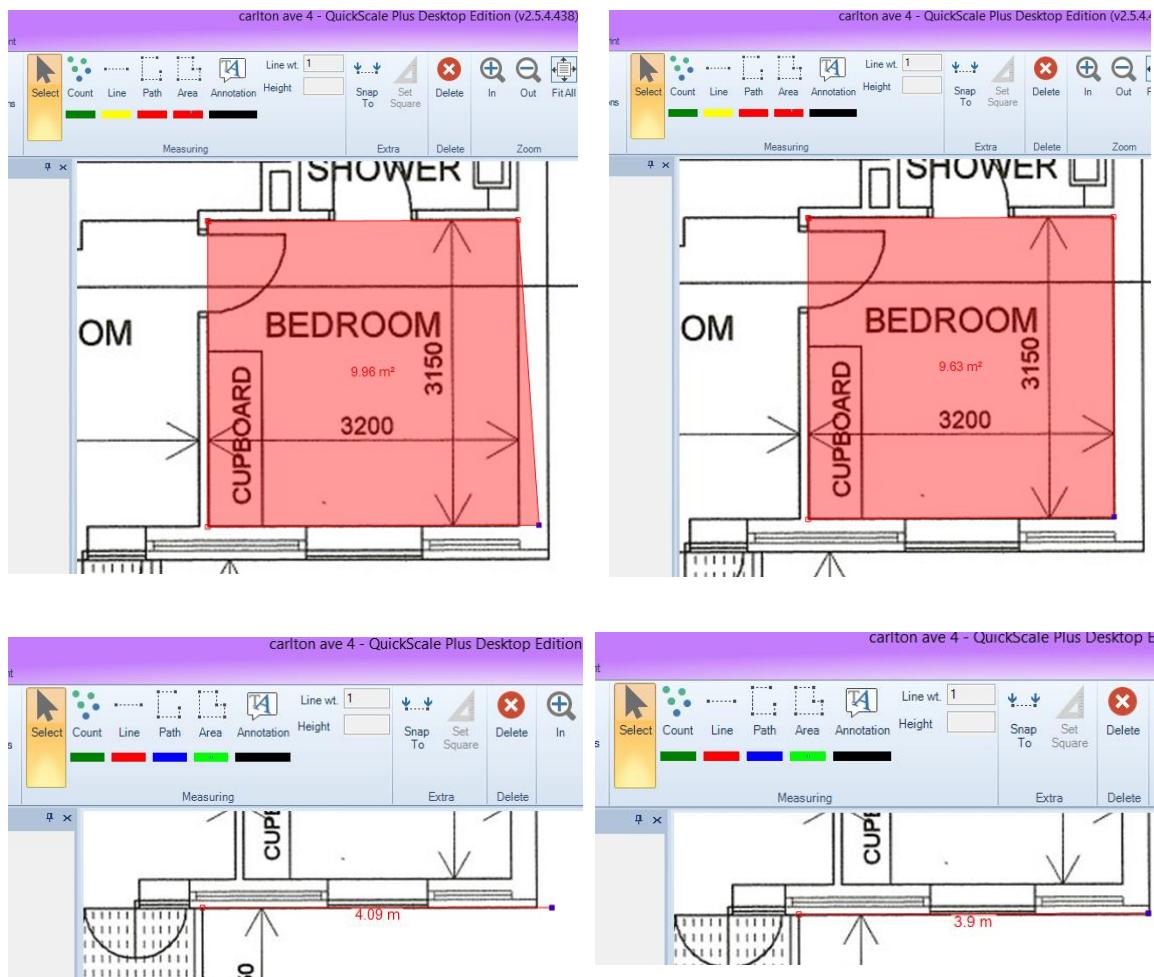

Kind regards

The QuickScale Team

sales@quickscale.co