


Shuffle information to suit your BoQ

You can re-arrange the column order in the Dimensions pane to correspond with the columns order in your Bills of Quantity or any other document.

In the Dimensions pane, click on the column heading and drag it left or right to shuffle the order.

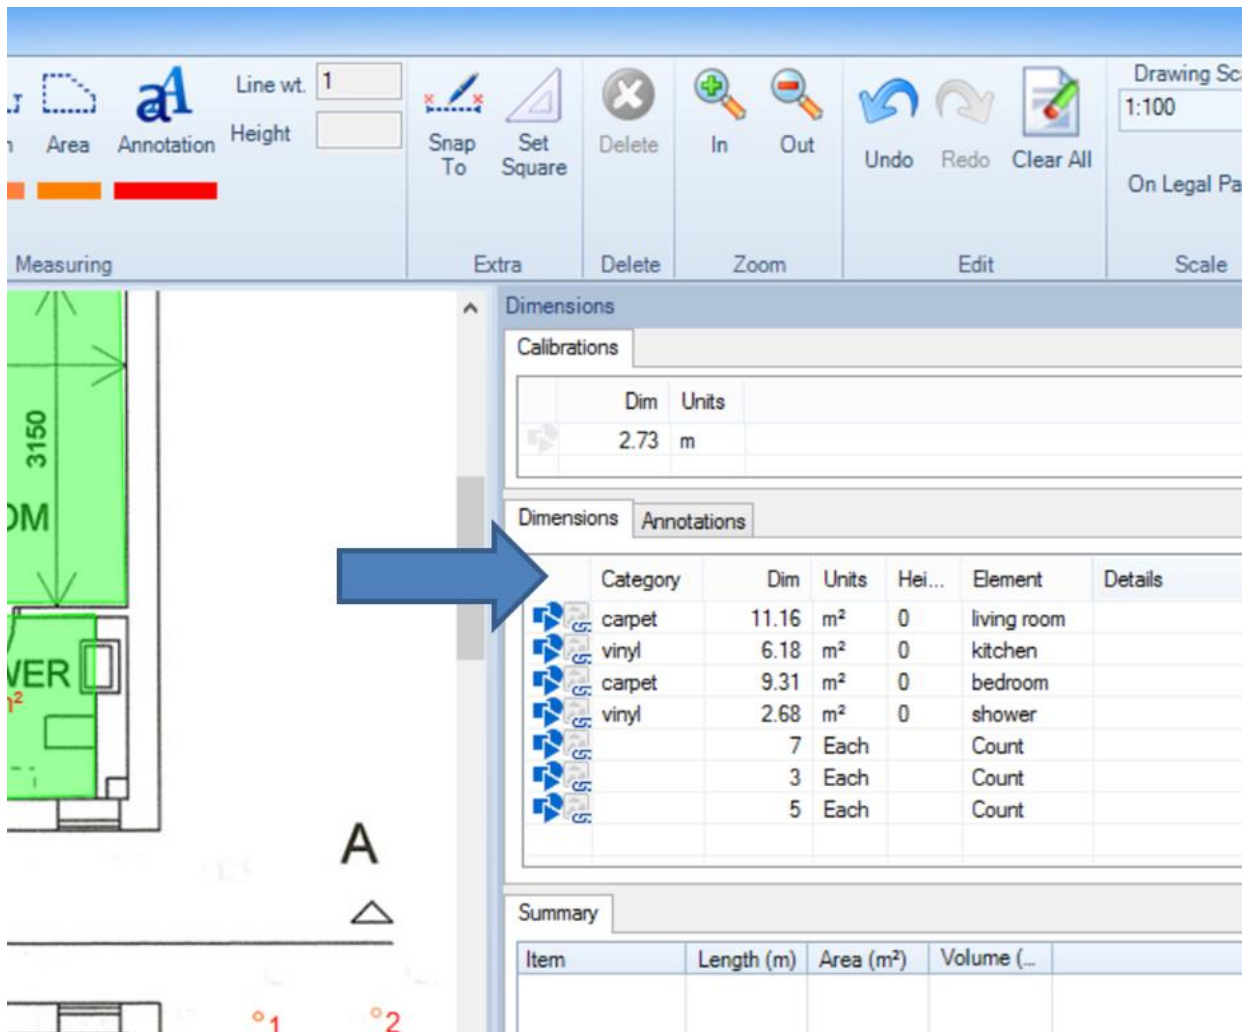

The screenshot shows a software interface with a drawing on the left and a 'Dimensions' pane on the right. The drawing includes a green highlighted area with a vertical dimension of 3150 and a section line 'A'. The 'Dimensions' pane has a 'Calibrations' section with a table:

Dim	Units
2.73	m

Below this is a 'Dimensions' section with a table:

Category	Dim	Units	Hei...	Element	Details
carpet	11.16	m ²	0	living room	
vinyl	6.18	m ²	0	kitchen	
carpet	9.31	m ²	0	bedroom	
vinyl	2.68	m ²	0	shower	
	7	Each		Count	
	3	Each		Count	
	5	Each		Count	

A blue arrow points to the 'Dimensions' column heading in this table. Below the table is a 'Summary' section with a table:

Item	Length (m)	Area (m ²)	Volume (...)

For more help and information, please email sales@quickscale.co